



Cam-action door closer

DORMA TS 97



A perfect combination of form and function

With its new model TS 97, DORMA is able to offer the smallest surface-mounted cam-action door closer available in the project sector. Single-piece face plates with internal end caps and uniform lengths of the door closer body and slide channel characterise the impressive design credentials of this product. Like all DORMA cam-action door closers, the TS 97 features the proven heartshaped cam for maximum user convenience based on minimum opening effort. With its compact dimensions, the TS 97 ideally complements the overall appearance of any door.

Certified to ISO 9001.

Benefits

For the trade

- One closer model for all applications to simplify materials management and stocking.
- Single pack for easy .

For the installer/fabricator

- Universally applicable on both LH and RH doors.
- Quick and easy to fix with mounting bracket

For the architect/specifier

- High-quality architectural solution for superior interior designs
- Uniform lengths of body and slide channel for enhanced harmony of appearance.
- Single-piece faceplate without slots or fixing points.

For the user

- Maximum ease of use and fully controlled, reliable closing with adjustable latching action.
- Dead stop unit as standard to protect the wall and door.

Data and features		TS 97
Closing force adjustable	Size	EN 2 – 4
Standard doors1)	up to 1100 mm	٠
External doors, outward op	-	
Fire and smoke check doo	٠	
Non-handed		٠
Arm assembly	Slide channel	٠
Closing speed adjustment	٠	
Latching action adjustmen	٠	
Dead stop unit (mechanica	٠	
Delayed action	_	
Backcheck	-	
Hold-open		0
Weight in kg		2.5
Dimensions in mm	Length	340
	Overall depth	37
	Height	49
Door closer compliant with	٠	
(mark for construction p	٠	


● yes - no ○ option


¹⁾ In the case of particularly heavy doors and doors that have to close against wind pressure, we recommend the DORMA TS 93



The heart-shaped cam and linear drive mechanism of the DORMA TS 97 ensure that the resistance encountered decreases almost instantly with the door opening action – so even children, the elderly and people with disabilities have no problem in passing through. User-friendly and reliable closing is also ensured by the delayed increase in the actuating torque at the 'latching' end of the sweep.


Opening forceClosing force

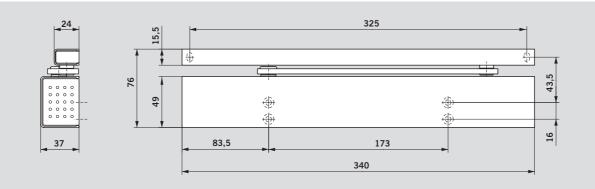

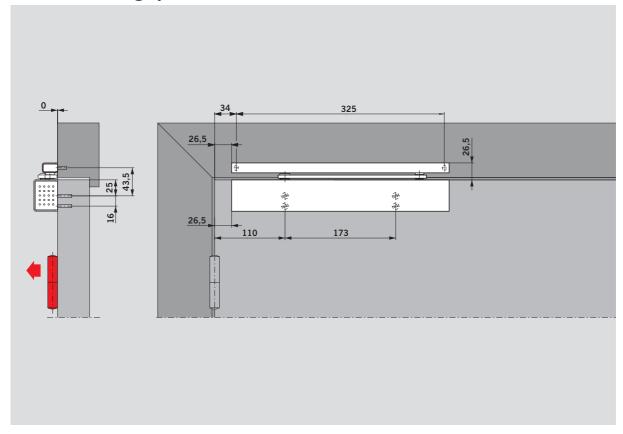

Door leaf fixing, pull-side (example: LH/ISO 6 door; mirror image for RH/ISO 5 door)

Transom fixing, pull side (example: LH/ISO 6 door; mirror image for RH/ISO 5 door)

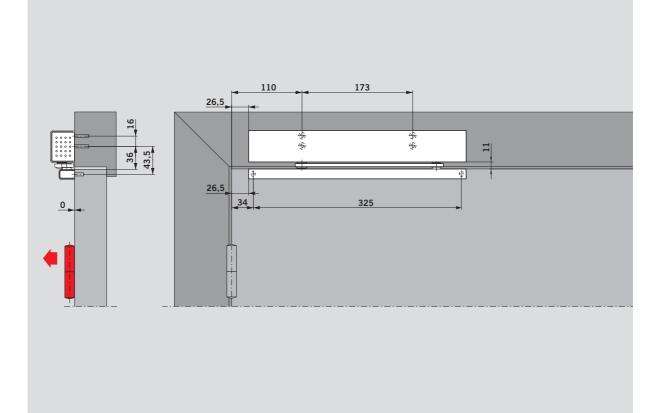



Standard equipment and accessories									
	TS 97				Mechanical hold-open device				
		cam-action door closer							
		Size EN 2 -	- 4		1300010	00			
Slide channel									
5	Э					#			
		130100xx							
Order No.	Colour		xx	Also available in "D	esign"	"Design" finishes are mock			
\blacksquare =ser body with arm,	Silver and	dised	01	finishes:		metallic surface coatings			
complete	n. to RAL 9016) 11 Stainless steel "De		sign" 04						
# =Accessory	Special c	olour	09	Polished brass "Design" 05					

Specification text

Cam-action door closer with rapidly decreasing opening torque. Compliant to EN 1154 and CE mark. Uniform lengths of door closer body and slide channel. Closing force EN 2 – 4, closing speed and latching action adjustable. Non-handed. With standard slide channel and dead stop unit. Accessories

Mechanical hold-open device

Colour

Make


DORMA TS 97



Standard and optional functions

The functions of the DORMA TS 97 can be individually adjusted to each door situation and matched to varying requirements.


The closer speed of the DORMA TS 97 can be infinitely adjusted by means of a valve, and there is a second valve for adjusting the latching action. The closing force is adjustable between EN 2 and 4 by means of a screw.

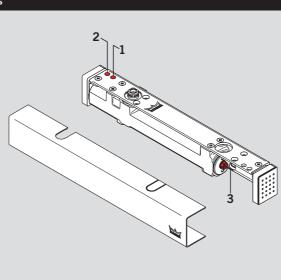




- 2 Infinitely adjustable latching action in the range 7° – 0°.
- **3** Adjustable closing force.

The integral **dead stop unit** of the DORMA TS 97 features progressive damping and helps to prevent a normally opened door from colliding with the adjacent wall. It can be adjusted to an opening angle between 80° and max. 120°. **The dead stop unit is not an overload protection device and in many cases is no substitute for a door stop.**

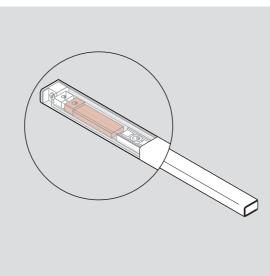

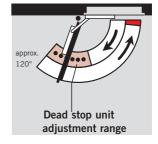





The **mechanical hold-open device** enables doors to be held without fallback at an opening angle up to approx. 120°.

The hold-open device is suitable for both LH and RH doors and is designed for retrofitting into the slide channel.

Not suitable for fire and smoke check doors

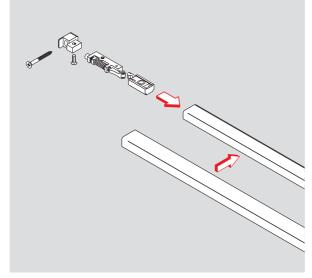

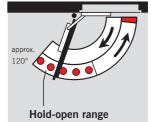





Door Control Division worldwide

Central Europe

DORMA GmbH + Co. KG Breckerfelder Str. 42–48 D-58256 Ennepetal Tel. +49 23 33/7 93-0 Fax +49 23 33/7 93-495

Australia

DORMA Door Controls Pty. Ltd. 52 Abbott Road Hallam/Victoria 3803 Australia Tel. +61 3/97 96 35 55 Fax +61 3/97 96 39 55

Emerging Markets

DORMA GmbH + Co. KG Breckerfelder Str. 42–48 D-58256 Ennepetal Tel. +49 23 33/7 93-0 Fax +49 23 33/7 93-495

DORMA Door Controls (Pty.) Ltd. Kings Court, 4A Mineral Crescent ZA-2000 Crown/Gauteng South Africa Tel. +27 11/8 30 02 80 Fax +27 11/8 30 02 91

Far East

DORMA Door Controls Pte. Ltd. No. 2 Jalan Terusan, Jurong Singapore 619285 Tel. +65 62 68/76 33 Fax +65 62 65/79 14

DORMA Door Controls Pte. Ltd. Room 701, Technology Plaza 651 King's Road North Point Hong Kong Tel. +825/250 34632 Fax +825/288 75370

France

DORMA France S.A.S. Europarc 42, rue Eugène Dupuis F-94046 Créteil Tel. +33 1/41 94 24 00 Fax +33 1/41 94 24 01

Gulf

DORMA Gulf Door Controls FZE Jebel Ali Free Zone, Roundabout 8, Unit VC 02 Dubai, United Arab Emirates Tel. +971 48/83 90 14 Fax +971 48/83 90 15

North America

DORMA Architectural Hardware DORMA Drive, Drawer AC Reamstown, PA 17567 Tel. +1-800-523-8483 Fax +1-800-274-9724

Scanbalt

DORMA Danmark A/S Sindalvej 6 – 8 DK-2610 Rødovre Tel. +45 44/54 30 00 Fax +45 44/94 95 04

South America

DORMA Sistemas de Controles para Portas Ltda. Av. Piracema, 1400 Centro Empresarial Tambore CEP 06400 Barueri/ São Paulo, Brasil Tel. +55 11/41 91 32 44 Fax +55 11/41 91 21 93

South-East Europe

DORMA AUSTRIA GmbH Pebering Strass 22 A-5301 Eugendorf Tel. +43 62 25/2 84 88 Fax +43 62 25/2 84 91

South Europe

DORMA Italiana S.r.I. Via. A. Canova 44/46 I-20035 Lissone (MI) Tel. +39 039/24 40 31 Fax +39 039/24 40 33 10

DORMA Ibérica, S.A. Camino San Martin de la Vega, 4 E-28500 Arganda del Rey (Madrid) Tel. +34 91/8 75 78 50 Fax +34 91/8 75 78 81

UK/Ireland

DORMA UK Ltd. Door Controls Division Wilbury Way GB-Hitchin Hertfordshire SG4 0AB Tel. +44 14 62/47 76 00 Fax +44 14 62/47 76 01



WN 052 636 51532, 09/04, TS 97, GB, x. xx. 09/04 · Subject to change without notice

Door Control

www.dorma.com









Security/ Time and Access (STA)

Movable

Walls

